

lockseal assembly

The Firomatic® Lockseal is a cost effective locking and sealing device in a single unit. When installed on a wing or wingless style gas cock, or meter connection nut with mating Firomatic security hardware, the lockseal provides positive protection against unauthorized use of gas. Violation of the replacement seal readily provides evidence of any tampering.

Construction


Both the stud and lockseal head are case hardened steel with plating for corrosion protection. Replacement seals are available in aluminum (silver color) and copper (copper color) for visual identification.

Installation (locked position)

Simply snap the lockseal head onto the stud.

Removal (unlocked position)

Break the replacement seal by opening the tab and peeling away the replacement seal from the lockseal head. Insert the lockseal key into the exposed lockseal head and separate the head from the stud.

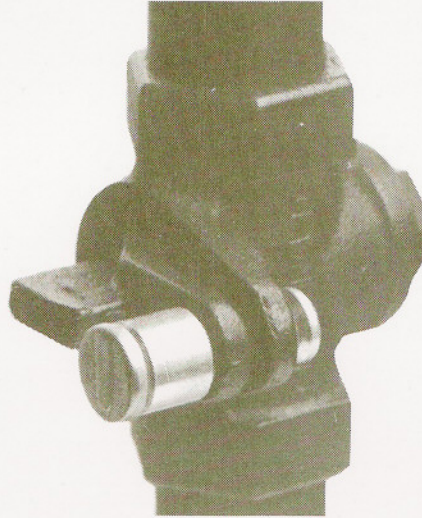


Resealing

Crimp the replacement seal onto the lockseal head using the Firomatic seal press and repeat the installation procedure.

Part Numbers — Lockseal Components

93210120	Lockseal head less seal
93210121	Lockseal head tapered less seal
93280148	Lockseal head with aluminum seal (silver)
93280149	Lockseal head with copper seal (copper)
93280156	Lockseal head tapered with aluminum seal (silver)
93280157	Lockseal head tapered with copper seal
93210140	Stud — regular diameter
93210141	Stud — small diameter
93210142	Stud — regular diameter extra long (1½")
93210130	Replacement seal — aluminum (silver)
93210131	Replacement seal — copper (copper)
93280139	Lockseal key
93280160	Seal Press

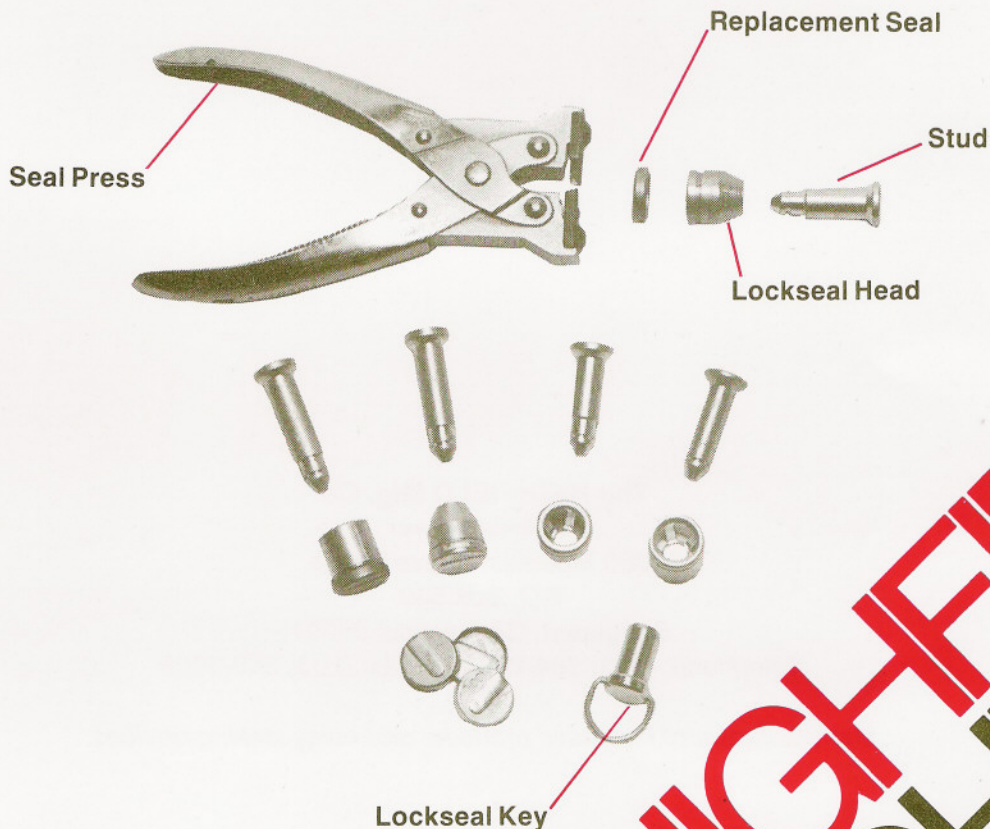

JL9802

HIGHFIELD
HIGHFIELD
HIGHFIELD